


# **How to Measure Tractor Covers**

#### **Measurement Instruction**

- Give exact measurement from edge to edge.
- ✓ The height dimensions will remain same as provided by you.
- ✓ We add 1" to 2" leeway on the given width/depth for easy pull-in and pull-out.

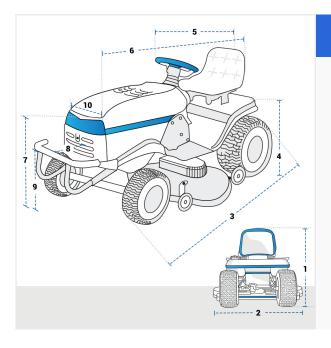

# **Measurement (Inches)**


- 1. Back Height
- 2. Back Width **Including Side** Parts
- 3. Total Depth without Bumper
- 4. Height#1
- 5. Depth From Steering To Seat
- 6. Depth From **Bonnet To Seat**
- 7. Height From **Ground To Bonnet**
- 8. Depth From **Bumper Guard** To Bonnet
- 9. Height From Ground To Bumper Guard
- 10. Bonnet Width



#### 1. Back Height:


**Guard:** 

Back Height of the Tractor

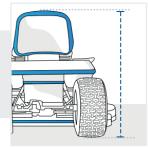


#### 2. Back Width Including Side Parts:

Back Width Including Side Parts of the Tractor

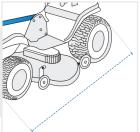

#### 4. Height#1:

Height (Side #1)

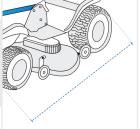



### 5. Depth From Steering To Seat:

3. Total Depth without Bumper

Total Depth of the Tractor

Depth From Steering To Seat of the Tractor

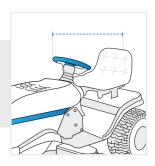

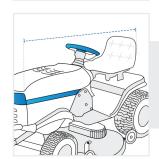


#### 6. Depth From Bonnet To Seat:

Depth From Bonnet To Seat of the Tractor



## 7. Height From Ground To Bonnet:

Height From Ground To Bonnet of the Tractor

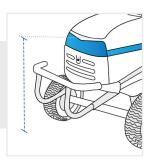

# 8. Depth From Bumper Guard To Bonnet:

Depth From Bumper Guard To Bonnet of the Tractor



Height From Ground To Bumper Guard of the Tractor





10. Bonnet Width:

Bonnet Width of the Tractor